

Program Easy-lift limits:

- 1 Press and hold K.1 until an L appears on the screen.
- 2 Press and hold K.1 until the door reaches the open position i.e. level with the lintel. If it is a double door, make sure that the lifting cables are not slack.
- 3 Press K3 to confirm the setting of the upper limit. A d will appear on the screen.
- 4 Press and hold K.2 until the door is about 100mm above the floor. Move the door in short runs down until the weather seal touches the floor. Do not press the door hard against the floor.
- 5 Press K.3 to confirm the setting of the lower limit. The door will now open and close in a trial run.
- 6 Open and close the door with the remote. Make sure the door will not open spontaneously after it has been closed. If it does, the whole process must be re-done.

Program easy lift remotes.

- 1 Press K.4. A red dot will appear on the screen.
- 2 Press the dedicated button on the remote. The red dot will disappear.
- 3 Press the button again. The red dot will flicker and fade out. The remote is programmed.
- 4 In cases where the whole memory of the remotes are to be erased, (e.g. in case of theft of remotes) press and hold K.4 until the red dot disappears. With the latest generation motors, the red dot will flicker and a big C will flicker on the display as soon as the memory is wiped out. All remotes for the particular door must then be re-programmed.

Activate or de-activate beams

- 1 Press and hold K.2 and K.3 together until “-“ appears on the screen. Press K.2 again. If “H” appears on the screen the beams are activated. If “ll” appears on the screen the beams are de-activated.
- 2 Press K.2 to toggle between activated or de-activated
- 3 Press K.3 to confirm.

Setting sensitivity.

1. Press K.2 until “p” appears on the screen,
2. Sensitivity may be set on a scale of 1 to 9. 1 being highly sensitive to 9 being less sensitive.
3. K1 will take the count upwards while K.2 will take it down.
4. Press K.3 to confirm.

Autoclose.

1. Press and hold K2 and K3 until – (dash) appear on the screen.
2. Press K1 once. The side profile of a chair will appear on the screen. If the seat shows towards the right, Auto close is activated. To the left it is de-activated. K1 will toggle between activated and de-activated.
3. Press K2. Any number between 1 to 9 (minutes) will appear on the screen. K2 will count up to 9 and start at 1 again. The number will indicate the time that the door will stay open.
4. Press K3 to confirm setting.

To program Receiver on our remotes;

1. Press the learn button on receiver –light will come on.
2. Press remote button twice. Remote is now programmed on gate motor or other brand garage motor.